


1

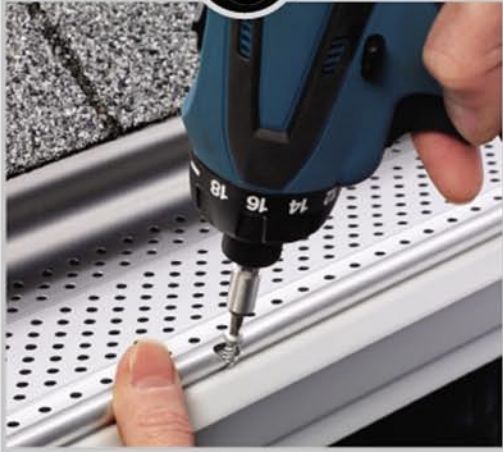

Align Smart Screen panel with the front edge of the gutter and fasten Smart Screen panel at the front with supplied panhead screw into the recessed hole

Fasten rear of Smart Screen panel to the fascia using a supplied panhead screw

2



3



Overlap Smart Screen panels using the cut-out guides at the end of each panel